

Serial Screen User Manual

Bilingual Edition

中英对照版

串口屏使用说明

设置串口屏 IP 地址
按住屏幕通电



进入“系统参数设置”


Page 1

Serial Screen User Manual


Set the serial screen IP address

Press and hold the screen while powering on

Enter "System Parameter Settings"

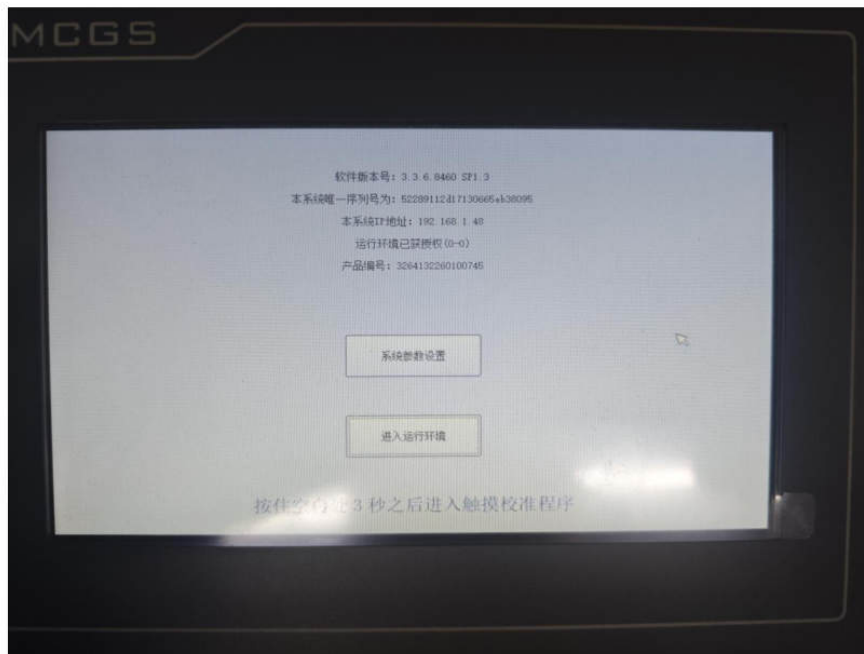

点击“网络”

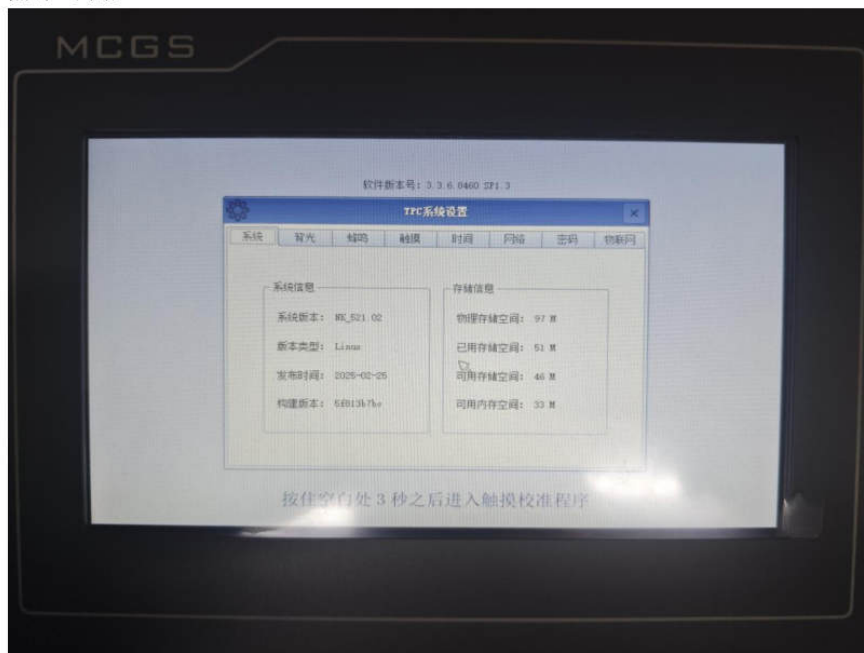


修改 IP 地址，子网掩码，点击“确定”

Page 2

Click "Network"

Modify the IP address and subnet mask, then click "OK"

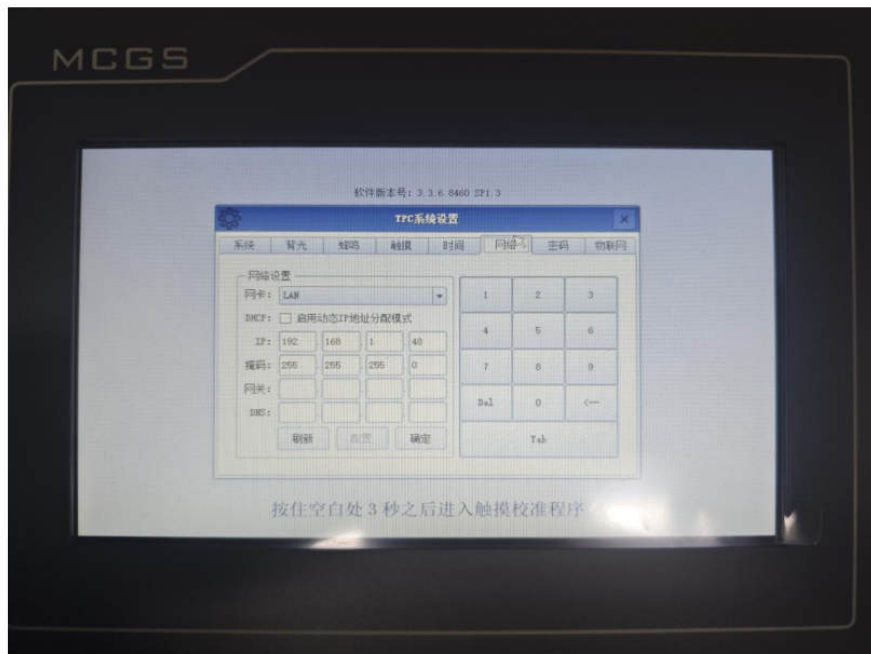

断电重启串口屏，进入系统



点击“菜单”，选择“参数设置”，设置打印机 IP


Page 3

Power off and restart the serial screen to enter the system.

Click "Menu", select "Parameter Settings", and set the printer IP.



点击 IP 地址进行修改，修改完成后点击“确定”，再点击“设置”进行保存，保存时间大概一分钟，期间不要断电，可进行其他操作，一分钟后参数保存成功。

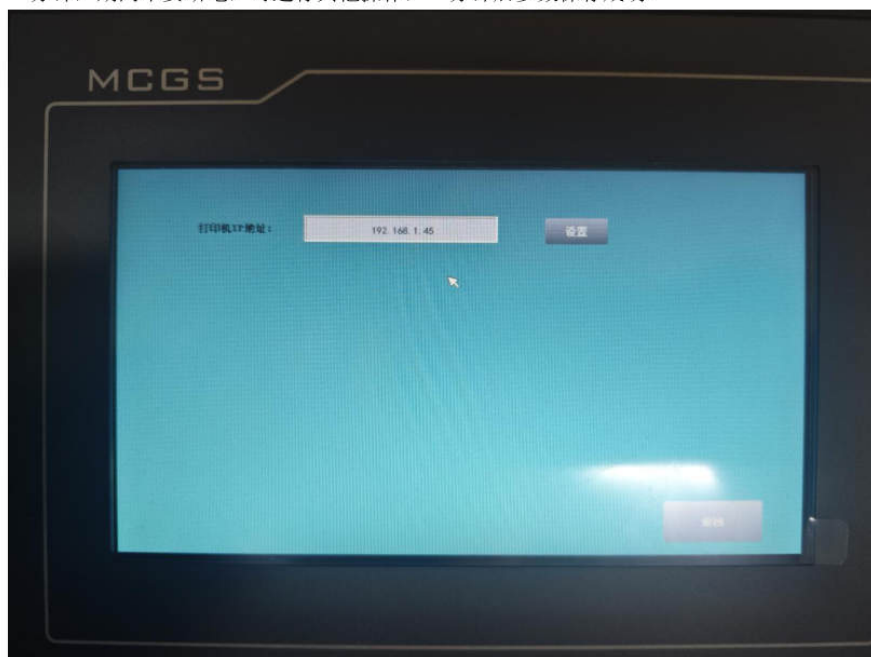


点击“模板打印”，点击“读取”，可以读取到打印机中的打印模板，按下拉按钮选择模板

Page 4

Click the IP address to modify it; after modification click "OK", then click "Set" to save. Saving takes about one minute; do not power off during this period. You can perform other operations. After one minute the parameters are saved successfully.

Click "Template Print", click "Read" to read the print templates in the printer; press the drop-down key to select a template.

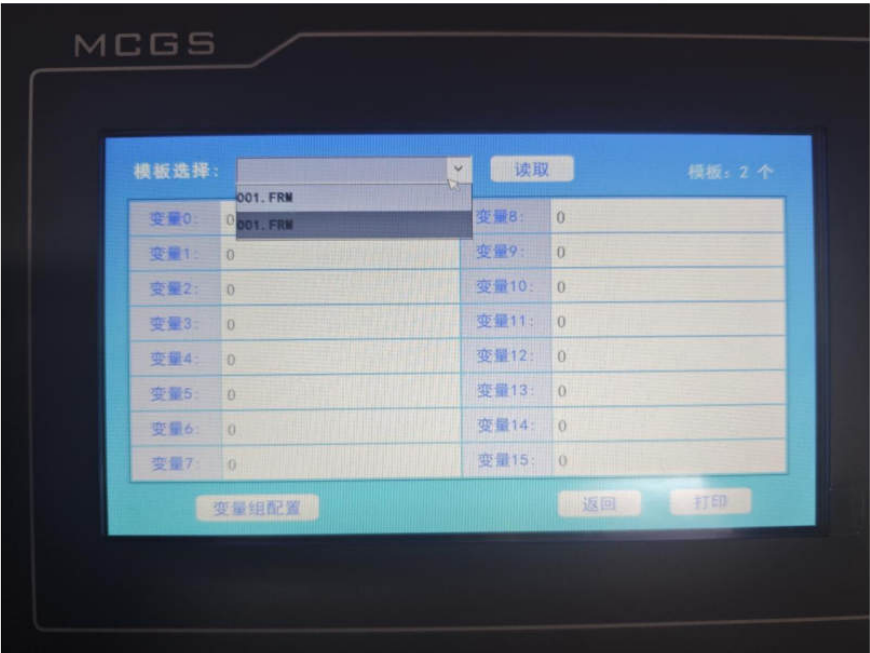

在“变量 0-变量 15”中修改变量内容，点击“变量组配置”，选择“配置*”，点击“导入组”可以将当前变量内容保存到变量组中，也可以选择“配置*”，点击“导出组”可将当前配置内容添加到变量中。



点击“打印”即可行进打印

Page 5

In "Variable 0 - Variable 15", modify the variable contents. Click "Variable Group Configuration", select "Config **", and click "Import Group" to save the current variable contents to the variable group. You can also select "Config **" and click "Export Group" to add the current configuration contents to the variables. Click "Print" to start printing.

返回主页面



走纸/FEED: 走出一张标签或者屏幕显示等待打印信号时，按此键可以充当打印信号

暂停/PAUSE: 打印过程中，按此键暂停打印或者继续打印

清除错误: 屏幕显示报错信息，按此键清除错误

清除数据: 打印机缓存的打印数据，按此键清除

打印机屏幕显示报错信息时，串口屏右侧信息栏同步显示报错信息

Page 6

Return to the main page.

Feed/FEED: feeds out one label, or when the screen shows a waiting-for-print-signal state, pressing this key can act as the print signal.

Pause/PAUSE: during printing, press this key to pause or resume printing.

Clear error: when the screen shows an error message, press this key to clear the error.

Clear data: clears the cached print data in the printer; press this key to clear.

When the printer screen shows an error message, the info bar on the right side of the serial screen shows the error message simultaneously.



按“清除错误”清掉报错信息之后，双击“报警描述”中的报错信息可以清除掉串口屏上的信息。

串口屏左下角信息与打印机屏幕信息同步，如：等待发送数据，等待打印信号，等待贴标信号.....

Page 7

After pressing "Clear Error" to clear the error message, double-click the error message in "Alarm Description" to clear the information on the serial screen.

The information in the lower-left corner of the serial screen is synchronized with the printer screen, such as: waiting to send data, waiting for print signal, waiting for labeling signal, ...